



MOUNTING HAND GRIPS LONG

Industry Squelette, Rocksor, Tyčinka Ø20


PREPARATION
FOR WOODEN DOOR

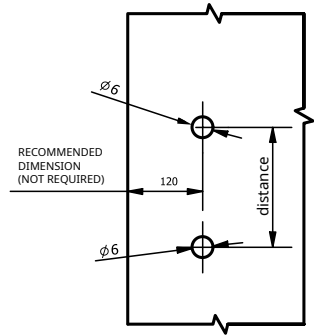


ONE-SIDE MOUNTING

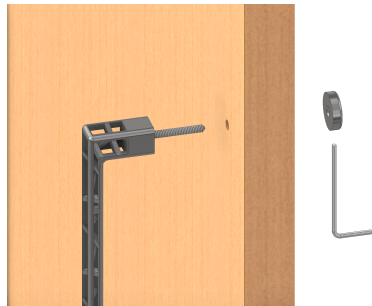


DOUBLE SIDE MOUNTING

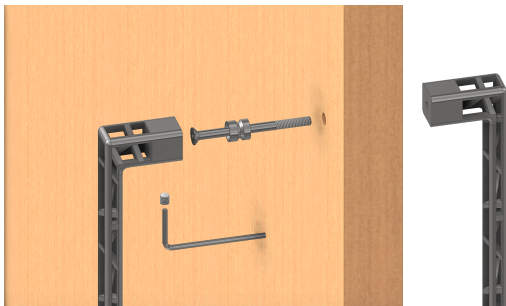


PREPARATION
FRO WOODEN DOOR
ONE-SIDE MOUNTING TO BLIND HOLE

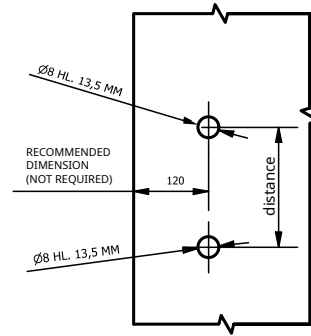


ONE-SIDE MOUNTING

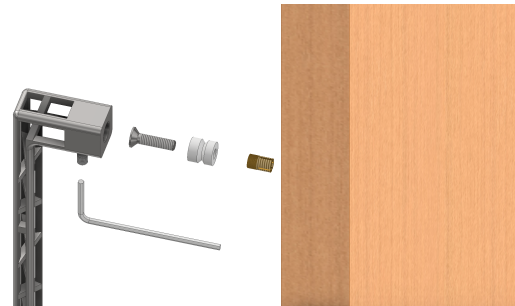

PREPARATION
FOR GLASS DOOR

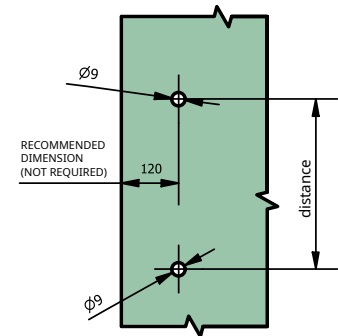

ONE-SIDE MOUNTING

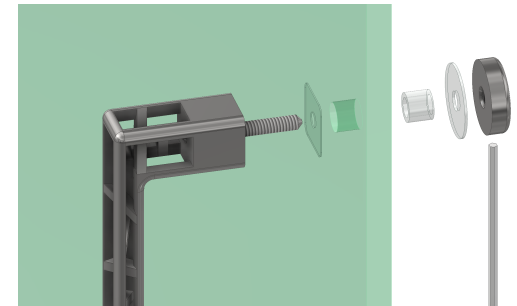

DOUBLE SIDE MOUNTING

